

Please read

IMPORTANT INSTRUCTIONS



WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has a pacemaker or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.



TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

3. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter.
5. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by Dyson, its service agent or similarly qualified persons in order to avoid a hazard.
6. Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces. Do not use in bathrooms, laundry areas or similar indoor locations. Never locate the appliance where it may fall into a bath or other water containers. Do not use or store where it may get wet or in the immediate surroundings of a bath, a shower, or a swimming pool.
7. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the base. Dyson recommends that this appliance is only to be used with the power supply unit provided with it.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
10. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
11. Do not use this appliance if it has been damaged or submerged in water.
12. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
13. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
14. Chemical Burn and Choking Hazard. Keep batteries away from children. This appliance contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the appliance, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Battery replacement



CAUTION

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow the battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Disposal information

- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- Dispose of the exhausted filter units in accordance with local ordinances or regulations.
- The battery should be removed from the product before it is discarded. When removing the battery, the appliance must be powered off. The battery should be safely disposed of.

Registration

- After registering your 2 year guarantee, your Dyson appliance will be covered for parts (excluding filters) and labour for 2 years from the date of purchase, subject to the terms of the guarantee. However, indispensable legal rights of the final consumer under applicable national legislation governing the sale of consumer goods are not affected by the terms of the guarantee. If you have any queries regarding your Dyson appliance, visit www.dyson.cn/supportcn for online help, general tips and useful information about Dyson.

Your guarantee

Limited 2 year guarantee

Terms and conditions of the Dyson 2 year limited guarantee

What is covered

- The repair or replacement of your Dyson appliance (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within 2 years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This guarantee will only be valid if the machine is used in the country in which it was sold.

What is not covered

- Replacement filter units. The appliance's filter units are not covered by the guarantee.
- Dyson does not guarantee the repair or replacement of an appliance where a defect is the result of:
 - Damage caused by not carrying out the recommended appliance maintenance.
 - Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the appliance which is not in accordance with the Dyson Operating Manual.
 - Use of the appliance for anything other than normal domestic household purposes.
 - Use of parts not assembled or installed in accordance with the instructions of Dyson.
 - Use of parts and accessories which are not genuine Dyson components.
 - Faulty installation (except where installed by Dyson).
 - Repairs or alterations carried out by parties other than Dyson or its authorised agents.
 - Normal wear and tear (e.g. fuse etc.).
 - Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact Dyson.

Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) purchase/delivery before any work can be carried out on your Dyson appliance. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.

Important data protection information

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website at privacy.dyson.com

请阅读

重要的安全说明

警告

- 风扇和遥控器中均包含磁体。
- 强磁场可能会对电子起搏器和心脏除颤器造成影响。如果您或您的家人使用电子起搏器或心脏除颤器，请勿将遥控器放在口袋里或靠近这些设备。
 - 磁场也会对信用卡或电子存储媒介造成影响，应使这些物品远离遥控器和产品的顶部。
为降低火灾、触电及受伤的危险：
 - 本产品不适合于身体、感觉或智力残障人士（包括儿童）以及缺乏相关经验和知识的人员使用，除非得到负责其安全的人员监护或指导。
 - 在清洁或执行任何维护，以及更换滤网前，请断开电源或拔下插头。
 - 如果电源线或插头损坏，请勿使用。一旦电源线损坏，必须由戴森公司、戴森服务代理商或具有相关资质的人员来进行更换，以避免危险。
 - 仅适合在干燥环境下使用。请勿在室外或潮湿表面上使用。请勿在浴室、洗衣房或类似的室内空间使用。请勿将本产品放置在可能掉入浴缸或其他盛水容器中的位置。请勿在可能使其潮湿或直接靠近浴缸、喷头或游泳池的位置使用或存放本产品。

- 本产品必须使用底座标识上规定的安全特低电压。仅可使用随附的戴森电源适配器。
- 请照顾好儿童，确保他们不会玩弄本产品。
- 使本产品远离易燃的液体、蒸汽、空气清新剂和精油。
- 始终直接将插头插入墙壁插座。请勿使用电源延长线，因为过载可能造成电源线温度过高，从而引起火灾。
- 如果本产品已损坏或浸水，请勿使用。
- 请保持本产品与电源线远离加热的表面。请勿在家具或产品下面放置电源线。
- 如果插头与插座之间出现松动，或者插头变得很烫，则可能需要更换插座。咨询有资质的电工以更换插座。
- 警告：化学烧伤和窒息危险。使电池远离儿童。本产品包含纽扣/硬币型锂电池。如果新的或废旧纽扣/硬币型锂电池被误吞或进入体内，可能会导致严重的内部烧伤，并在短至 2 小时内导致死亡。请确保电池盖完全安全。如果电池盖未安全闭合，请停止使用产品，取下电池，并使其远离儿童。如果认为电池可能被吞下或放入身体任何部位，请立即就医。

更换电池

注意事项

- 拧下遥控器上的电池盖。松开底座，将电池取出。
- 请勿反装电池，可能导致电池短路。
- 请勿尝试拆解电池或为电池充电。远离火源。
- 安装新电池时，请遵照电池制造商的说明操作（电池型号为 CR 2032）。
- 请务必装回遥控器上的螺丝，并参照在警告部分有关电池危险的描述。

处置信息

- 处置电池或者再循环利用电池时，需遵循当地的法令或规章。
- 处理废弃的滤网时，需遵循当地的法令或法规。
- 请在处置产品前，从产品中取出电池。在拆除电池时，必须将本产品断电。应当安全地处置电池。

注册

- 登记获取 2 年保修后，您的戴森产品自购买之日起将享受 2 年的产品保修（含零件及人工，滤网除外），但须符合保修条款的规定。但是，最终消费者依据产品销售所适用的国家法规享有不可撤销的合法权利，此类权利不受保修条款规定的影响。关于戴森产品，如果您有任何问题，请访问 www.dyson.cn/supportcn 以获取有关戴森产品的在线帮助、一般信息提示和其他有用的信息。

不保修范围

- 更换滤网不在保修的范围。
 - 戴森不保证以下原因导致的产品修理或更换：
 - 由于不执行建议的产品维护而导致的损坏。
 - 由于使用时不小心、误用、疏忽、粗暴操作或以任何违反戴森操作手册的方式操作戴森产品所造成的意外损坏和故障。
 - 将产品用于任何正常居家使用之外的目的。
 - 使用的零件未按戴森指导说明进行组装或安装。
 - 使用非戴森原厂的零件和附件。
 - 错误安装（戴森安装的除外）。
 - 非戴森或其授权代理所执行的维修或改动。
 - 正常磨损和损耗（例如，保险丝等）。
 - 由于电池老化或使用而导致电池放电时间缩短（仅无绳产品）。
- 如果您对保修范围有任何疑问，请致电戴森热线。

保修范围概要

- 保修自购买（或交付，若交付时间略晚于购买时间）之日起生效。
- 在您的戴森产品接受任何处理前，您必须提供（初次及任何后续）交货/购买的证明材料。若无此证明材料，任何处理都会收费。请妥善保存您的收据或提货单。
- 所有工作都将由戴森或其授权代理商完成。
- 任何更换的部件将归戴森所有。

关于您的隐私权

- 注册戴森产品时：
- 您需要向我们提供基本联系信息，方可注册您的产品，使我们能支持您的保修。
 - 注册时，您可以选择是否从我们这里接收通讯。如果您同意接收戴森的通讯，我们将向您发送特别优惠详情和最新发明及创新产品方面的新闻。
 - 我们决不会将您的信息出售给第三方。只会按我们隐私政策的规定使用您与我们分享的信息，政策内容可在我们网站上找到：privacy.dyson.com

您的保修

2 年有限保修

戴森 2 年有限保修的条款与条件

保修范围

- 除非法律另有规定，如果在购买或交付的 2 年内发现戴森产品存在材料、制造或功能缺陷，将为您维修或更换（由戴森决定）戴森产品（如果任何部件不可获取或不再制造，戴森将为您更换功能相当的替换部件）。
- 本保修仅当产品在售出时有效力。

MARKING FOR NAME & CONTENT OF HAZARDOUS SUBSTANCES OR ELEMENTS

有害物质或元素名称及含量标识

Part Name 部件名称	Hazardous Substances or elements 有害物质或元素					
	Cadmium 镉 (Cd)	Lead 铅 (Pb)	Mercury 汞 (Hg)	Hex Chromium 六价铬 (Cr(VI))	Polybrominated biphenyls 多溴联苯 (PBB)	Polybrominated diphenyl ethers 多溴二苯醚 (PBDE)
External chassis, body 外壳, 机身	○	○	○	○	○	○
Internal wire & cable 内部电线及电源线	○	○	○	○	○	○
Foam materials 泡棉材料	○	○	○	○	○	○
Screws & nuts 螺丝及螺母	○	○	○	○	○	○
Controller & parts 控制器及其部件	○	○	○	○	○	○
Printed circuit board & components 印刷电路板及电子部件	○	X ⁽¹⁾	○	○	○	○
Motor Assembly 电机组件	○	X ⁽¹⁾	○	○	○	○
Power Adapter 电源适配器	○	X ⁽¹⁾	○	○	○	○

The table is compiled in accordance to SJ/T 11364 standard.
本表格依据 SJ/T 11364 的规定编制。

O: Indicate that this toxic or hazardous substance contained in all of the homogeneous materials for this part is within the limit requirement in GB/T26572
O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X: Indicate that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is at least the limit requirement in GB/T26572
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

(1) Toxic or hazardous substance contained is exempted under EU RoHS directives exemption list (2011/65/EU).
(1) 部件材料中有毒或有害物质含量符合欧盟 RoHS 指令豁免项目的限值 (2011/65/EU)。

Disclaimer:

The environment safe use period is declared based on the normal temperature & humidity used conditions.

声明:

环保使用期限的参考标识取决于产品正常工作的温度和湿度等条件。

